

EEC173B/ECS152C, Spring 2009

Cellular Wireless Network

- Architecture and Protocols
- Applying concepts learned in first two weeks:
 Frequency planning, channel allocation & hand-offs
- * Acknowledgment: Selected slides from Prof. Schiller

Chuah, Winter 06



Wireless Wide-Area Networks (WWANs)

- Early mobile system achieves large coverage area by using a single, high powered transmitted with an antenna mounted on a tall tower
 - E.g., Bell mobile system in New York City (1970s) could support 12 simultaneous calls over a thousand square miles
- Cellular concept was a major breakthrough to solve the problem of spectral congestion and user capacity
 - Replace single, high power transmitted (large cell) with many low power transmitters (small cells)
 - Each base station (BS) gets a portion of the total number of channels
 - Neighboring BSs are assigned different groups of channels so that interference is minimized

2



1st Generation Cellular System: AMPS

- Advanced Mobile Phone System (AMPS)
 - Divides 800 MHz spectrum into several channels, each 30 KHz wide => 832 full-duplex channels
 - Cellular structure uses cluster size of seven (N=7), r=10-20 Km
 - Use concept of trunking (as in phone networks)
 - Grade-of-service (GoS) measures network accessibility, i.e., probability of call being block or experiencing a queuing delay greater than a threshold value
 - AMPS is designed for GoS=2%



Problems with 1G Systems

- · No use of encryption
- Inferior call quality
 - Analog traffic is degraded by interference. In contrast to digital traffic, no coding or error correction is applied
- Spectrum inefficiency
 - Dedicated channel allocated per user
 - Unlike digital signals that allow compression, cannot reduce amount of capacity needed to send data



→ 2G systems


 2G systems are Digital: convert speech into digital code (a series of pulses)

4



2nd Generation: GSM

- Formerly: Groupe Spéciale Mobile (founded 1982)
- Now: Global System for Mobile Communication
- Pan-European standard (ETSI, European Telecommunications Standardisation Institute)
- Simultaneous introduction of essential services in three phases (1991, 1994, 1996) by the European telecommunication administrations (Germany: D1 and D2)
 → Seamless roaming within Europe possible
- Today many providers all over the world use GSM (more than 184 countries in Asia, Africa, Europe, Australia, America)
 - More than 747 million subscribers
 - More than 70% of all digital mobile phones use GSM
 - Over 10 billion SMS per month in Germany, > 360 billion/year

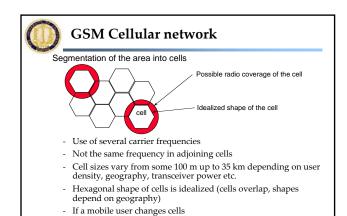

- handover of the connection to the neighbor cell




Frequency Assignment

- Fixed frequency (channel) assignment FCA
 - Each cell is assigned a fixed number of channels (frequencies)
 - Channels used for both handoffs and new calls
 - Problem: different traffic load in different cells
- · Reservation channels with FCA
 - Each cell reserves some channels for handoff cells
- Channel borrowing
 - A cell may borrow free channels from neighboring cells
- Dynamic frequency (channel) assignment DCA
 - Base station chooses frequencies depending on the frequencies already used in neighbor cells
 - More capacity in cells with more traffic
 - Assignment can also be based on interference measurements



Cell Breathing


- · CDMA systems: cell size depends on current
- Additional traffic appears as noise to other users
- · If the noise level is too high users drop out of

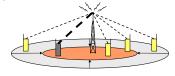



GSM - TDMA/FDMA (1)

- GSM uses FDM to separate the channels
 - Each call is allotted a duplex channels separated by 45MHz, each channel has 200KHz bandwidth
 - Downlink (BS->MT) channels: 935-960MHz
 - Uplink (MT-> BS) channels: 890-915 MHz

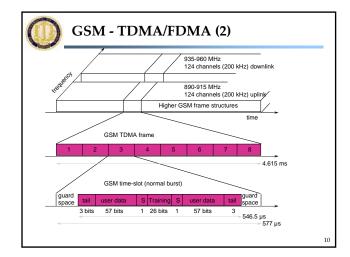



Disadvantages of GSM


- There is no perfect system!!
- No end-to-end encryption of user data
- No full ISDN bandwidth of 64 kbit/s to the user, no transparent B-channel
- Security and Privacy issues
 - Abuse of private data possible
 - Roaming profiles accessible
- High complexity of the system
- Several incompatibilities within the GSM standards
- Safety issues
 - Reduced concentration while driving
 - Electromagnetic radiation




Architecture of the GSM system

- GSM is a PLMN (Public Land Mobile Network)
 - Several providers setup mobile networks following the GSM standard within each country
- Components
 - MS (mobile station)
 - BS (base station)
 - MSC (mobile switching center)
 - LR (location register)
 - Home location register (HLR) vs. Visitor location register (VLR)
- Subsystems
 - RSS (radio subsystem): covers all radio aspects
 - NSS (network and switching subsystem): call forwarding, handover, switching
 - OSS (operation subsystem): management of the network

12

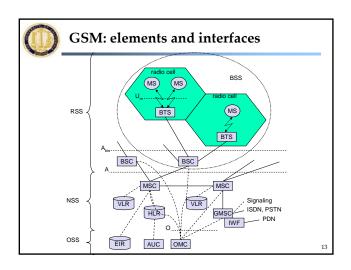

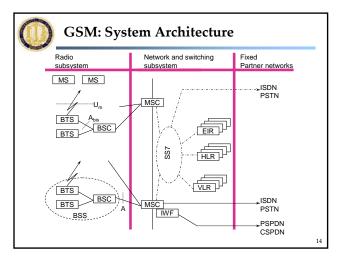



Mobile Services Switching Center (MSC)

- The MSC plays a central role in GSM
 - Switching functions
 - Additional functions for mobility support
 - Management of network resources
 - Integration of several databases
- Functions of a MSC
 - Specific functions for paging and call forwarding
 - Termination of SS7 (signaling system no. 7)
 - Mobility specific signaling
 - Location registration and forwarding of location information
 - Provision of new services (fax, data calls)
 - Support of short message service (SMS)
 - Generation and forwarding of accounting and billing information

GSM Protocol Layers for Signaling MS BSC MSC BTS СМ СМ ММ MM BSSAP RR RR' BTSM ВТЅМ RR' SS7 SS7 LAPD_m LAPD_m LAPD LAPD PCM 16/64 kbit/s 64 kbit/s / 2.048 Mbit/s



Base Transceiver Station and Base Station Controller

- Tasks of a BSS are distributed over BSC and BTS
 - BTS comprises radio specific functions
 - BSC is the switching center for radio channels


Functions	BTS	BSC
Management of radio channels		X
Frequency hopping (FH)	X	X
Management of terrestrial channels		Х
Mapping of terrestrial onto radio channels		X
Channel coding and decoding	X	
Rate adaptation	Х	
Encryption and decryption	X	X
Paging	Х	X
Uplink signal measurements	X	
Traffic measurement		Х
Authentication		Х
Location registry, location update		Х
Handover management		X




GSM Control Channels

- Broadcast control channel (BCCH)
 - Downlink channel that contains BS's identity and channel status
 - MT monitor BCCH to detect if they have moved into a new cell
- Dedicated Control Channel (DCCH)
 - Every call has its own allotted DCCH for call-setup, location updates, and call management info exchange
 - BS uses info in DCCH to track MT's footprint
- Common Control Channel (CCCH)
 - Downlink Paging Channel: used to page MT to alert it for an incoming call
 - Random Access Channel: support slotted ALOHA-based request from MT to BS for call-initiation
 - Access Grant Channel: BS informs MT of the allotted duplex channel for a call

18

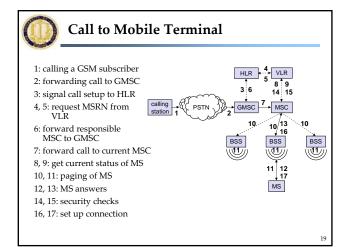

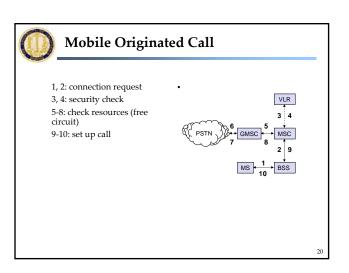



Subscriber Identity Module (SIM)

- An important feature of GSM
- SIM: Smart card pluggable into GSM phone
 Store subscriber's ID@, network/countries subscriber is entitled to service, other user-specific info
- SIM provides personal mobility
 - SIM card can be inserted to another handset